
Sound system, Bang & Olufsen , (8RF) from September 2014




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

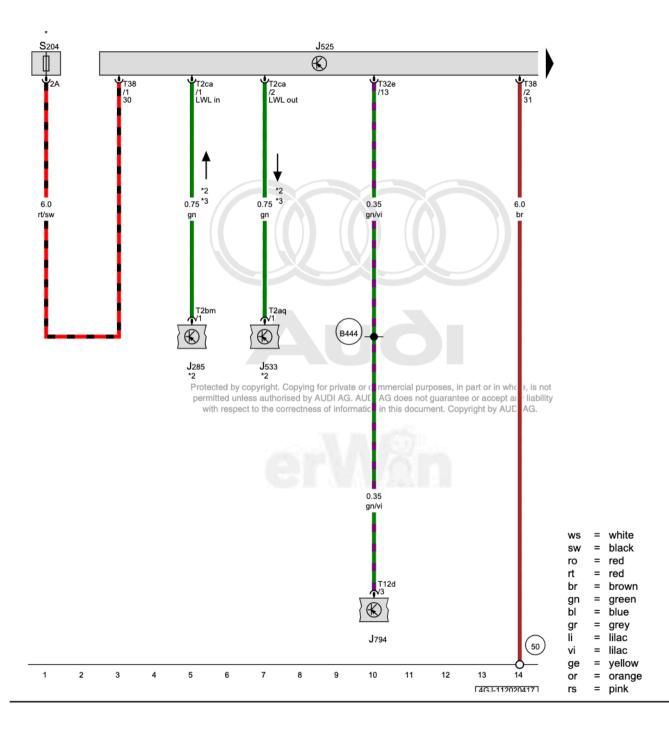

Digital sound system control module, Information electronics control module 1, Fuse 1 (terminal 30)

- J285 Instrument cluster control module
 J525 Digital sound system control module
 J533 Data bus on board diagnostic interface
 J794 Information electronics control module 1
 S204 Fuse 1 (terminal 30)
 T2aq 2-pin connector
 T2bm 2-pin connector
- T2bm 2-pin connector
 T2ca 2-pin connector
 T12d 12-pin connector
- T32e 32-pin connector T38 38-pin connector
- 50 Ground connection in luggage compartment, left
- OBD connection 1 (in main wiring harness)
- Refer to applicable wiring diagram for fuse positions
- *2 Refer to applicable wiring diagram for data bus networking
- *3 Fiber optic cable

No. 112/3

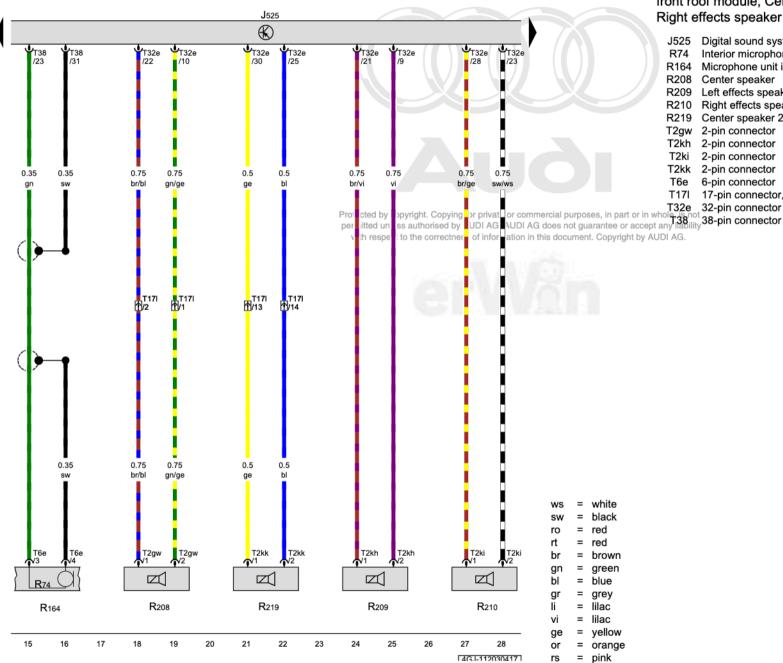

Digital sound system control module, Microphone unit in front roof module, Center speaker, Left effects speaker, Right effects speaker

J525 Digital sound system control module

Interior microphone

R164 Microphone unit in front roof module

R208 Center speaker

R209 Left effects speaker

R210 Right effects speaker

R219 Center speaker 2

T2gw 2-pin connector

T2kh 2-pin connector


T2ki 2-pin connector

T2kk 2-pin connector

6-pin connector

T17I 17-pin connector, in the left A-pillar connector station, gray

T32e 32-pin connector

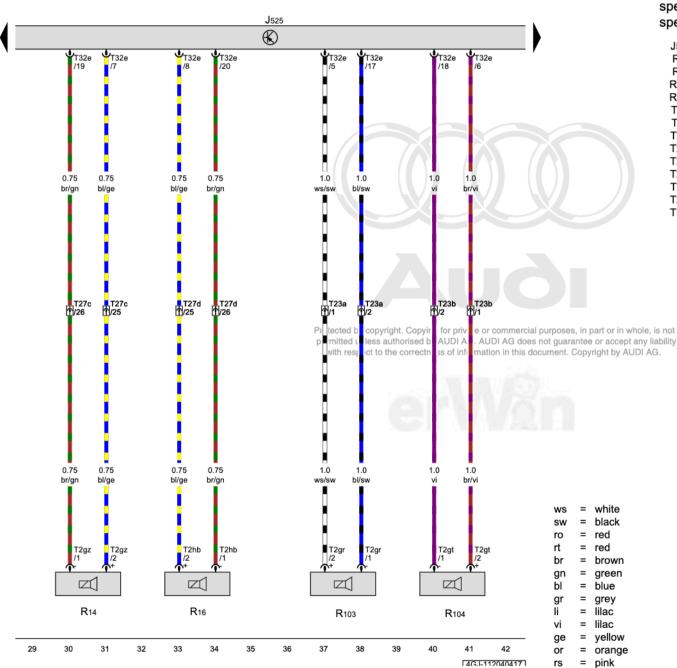

Digital sound system control module, Left rear treble speaker, Right rear treble speaker, Left front midrange speaker, Right front midrange speaker

J525 Digital sound system control module

R14 Left rear treble speaker

R16 Right rear treble speaker

R103 Left front midrange speaker

R104 Right front midrange speaker

Γ2gr 2-pin connector

T2gt 2-pin connector

T2gz 2-pin connector

T2hb 2-pin connector


T23a 23-pin connector, on the left A-pillar, black


T23b 23-pin connector, on the right A-pillar, black

T27c 27-pin connector, on the left B-pillar, black

T27d 27-pin connector, on the right B-pillar, black

T32e 32-pin connector

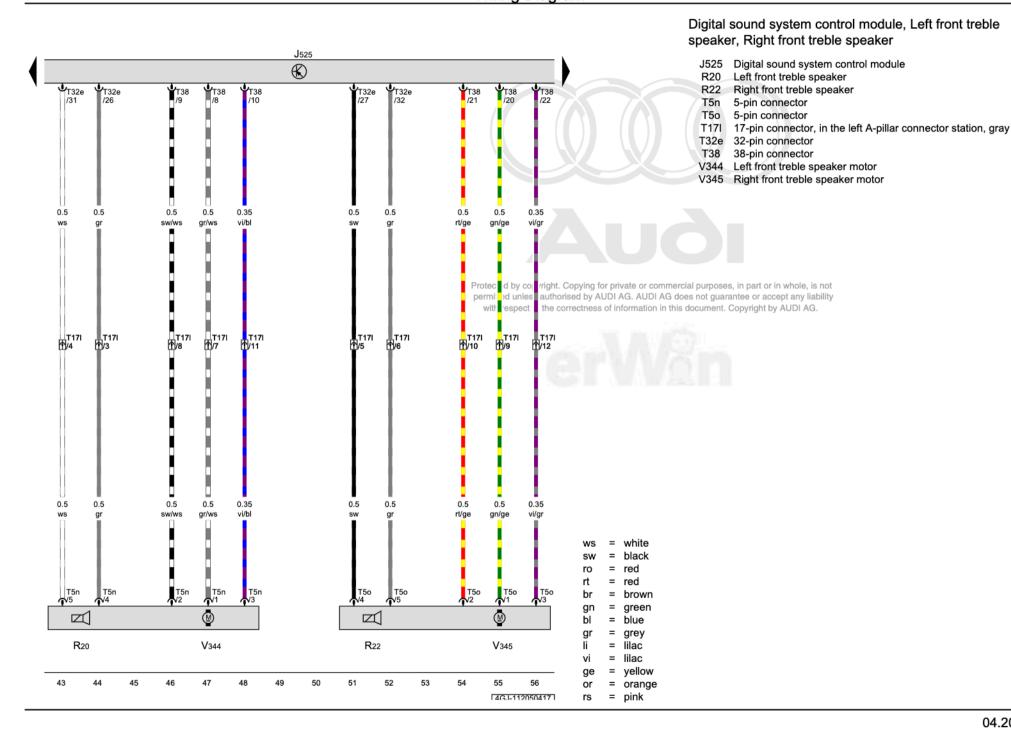

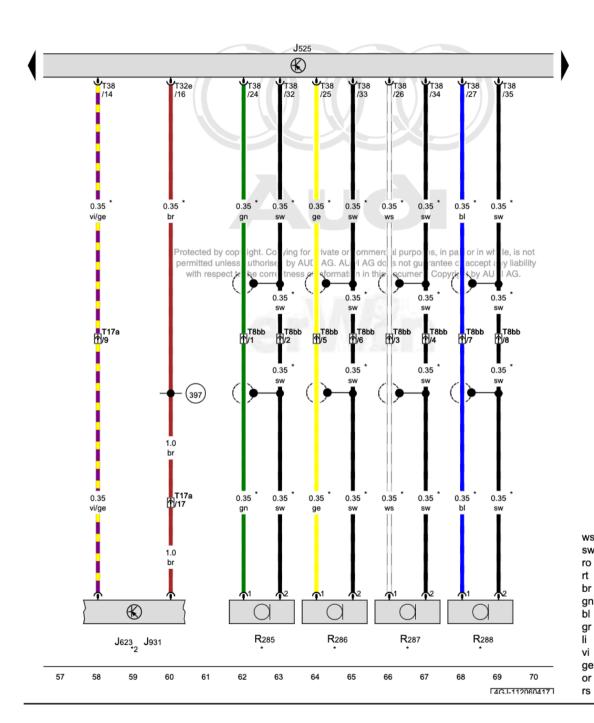

Digital sound system control module, Noise reduction microphone 1, Noise reduction microphone 3

- J525 Digital sound system control module
- J623 Engine control module
- 931 Subframe mount control module
- R285 Noise reduction microphone 1
- 286 Noise reduction microphone 2
- R287 Noise reduction microphone 3
- R288 Noise reduction microphone 4
 T8bb 8-pin connector, on the left C-pillar
- T17a 17-pin connector, Left plenum chamber E-box connector station
- T32e 32-pin connector
- T38 38-pin connector

= white = black = red = red = brown = green

= blue = grey


= lilac

= lilac = yellow

= pink

= orange

- (397) Ground connection 32 (in main wiring harness)
- * Only for vehicles with noise reduction
- *2 Refer to applicable engine wiring diagram

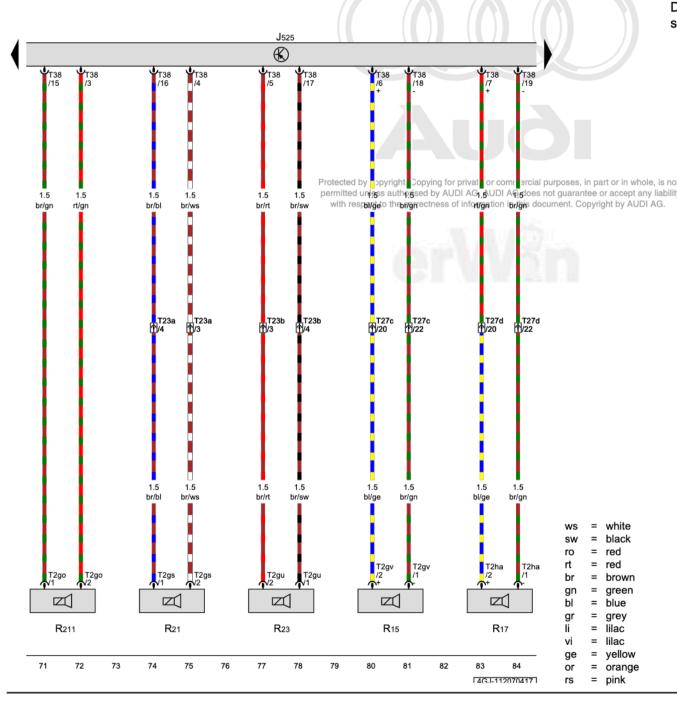

Digital sound system control module, Right rear bass speaker, Left front bass speaker, Subwoofer

- J525 Digital sound system control module
- R15 Left rear bass speaker
- Right rear bass speaker
- Left front bass speaker
- Right front bass speaker
- R211 Subwoofer
- T2go 2-pin connector
- T2gs 2-pin connector
- T2gu 2-pin connector
- T2gv 2-pin connector
- T2ha 2-pin connector
- T23a 23-pin connector, on the left A-pillar, black
- 23-pin connector, on the right A-pillar, black T27c 27-pin connector, on the left B-pillar, black
- T27d 27-pin connector, on the right B-pillar, black
- 38-pin connector